


## INSTALLATION OF THE VINYL SCREED

1-USE A CHALK LINE AND MARK THE INSTALLATION AREA TO THE EXACT DIMENSION OF THE WALK-IN AS SHOWN IN THE DRAWING

2-INSTALL THE VINYL SCREED ALONG THE CHALK LINES.

APPLY A BEAD OF SILICONE ALONG THE BOTTOM OF THE VINYL SCREED,  
THEN SECURE TO FLOOR WITH 1/4"  $\phi$  PIN-GRIP UNDER ALL WALLS AND DOOR FRAME LEGS.

3-SEAL WITH SILICONE THE BOTH, THE INSIDE AND THE OUTSIDE EDGES OF THE WALL PANELS

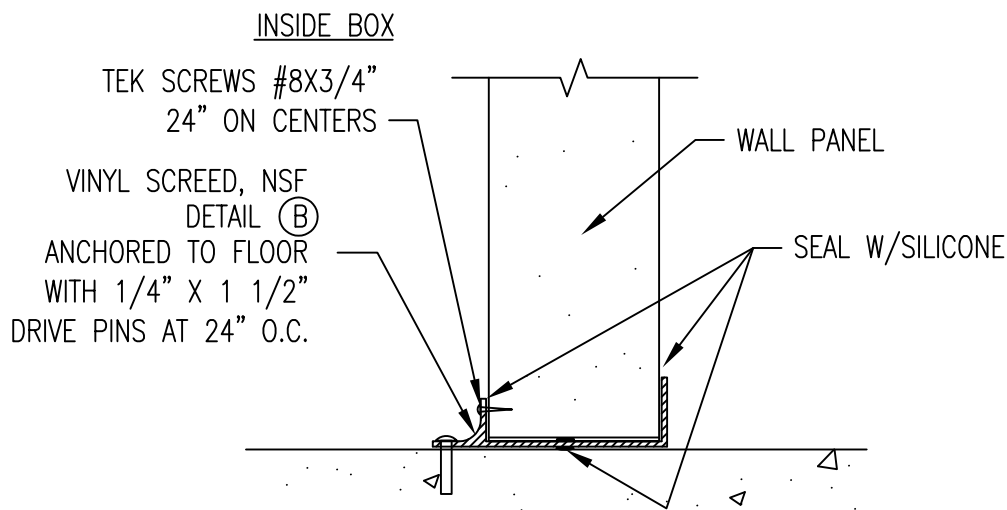

VINYL SCREED SHOULD BE INSTALLED  
WITH SILICONE UNDER AND SECURE TO  
FLOOR WITH 1/4"  $\phi$  PIN-GRIP, UNDER  
ALL WALLS AND DOOR FRAME LEGS.

VINYL SCREED/WALL PANEL  
ASSEMBLY DETAIL (A)